

ALTA




ALTA

ALTA CETIO – ONE-PIECE SKIRTED TOILET

TECHNICAL INFORMATION


VERIFY VALVE AND ROUGH-IN POSITION BEFORE INSTALLATION.

TOILET TYPE	ONE-PIECE TOILET
COLOR.....	GLOSSY WHIT - MATTE BLACK
DESIGN	FULLY SKIRTED CONCEALED TRAPWAY
BOWL SHAPE	ROUND MODERN BOWL
INSTALLATION TYPE	FLOOR MOUNTED
WASTE OUTLET	FLOOR OUTLET
FLUSH SYSTEM	DUAL TOP FLUSH
FLUSH TECHNOLOGY	SIPHONIC FLUSHING SYSTEM
WATER CONSUMPTION	0.8 GPF (4.8 / 3 LPF)
TRAPWAY	FULLY GLAZED TRAPWAY FOR IMPROVED FLOW
SEAT	SLOW-CLOSE SEAT WITH EASY-RELEASE SYSTEM
ROUGH-IN	12"
CERTIFICATION	CUPC CERTIFIED
OUTLET TYPE	VERTICAL OUTLET

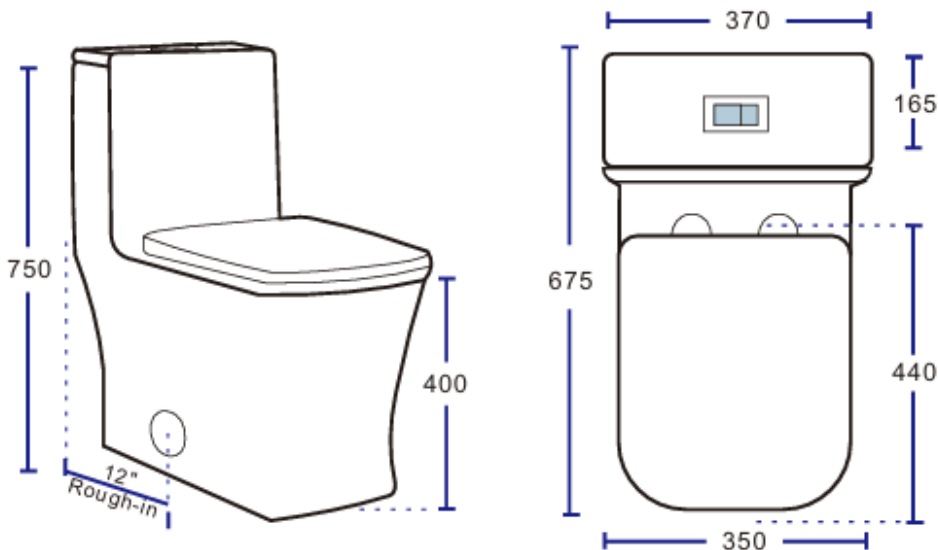

CETIO


1

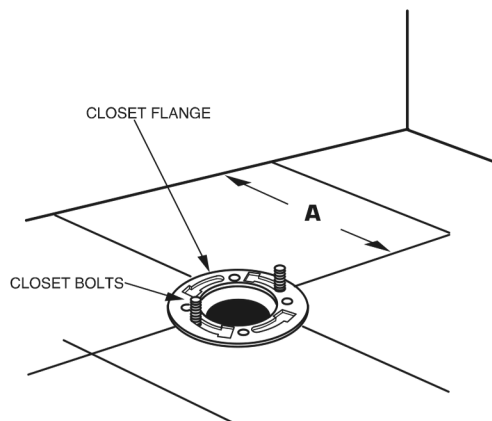

INSTALL CLOSET BOLTS

Install closet bolts in flange channel, turn 90°, and slide into place 6" (152 mm) apart and parallel to wall.


2

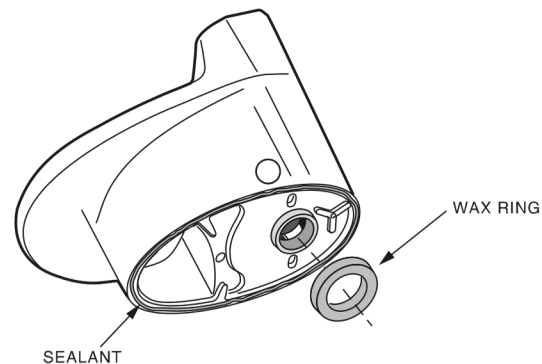

INSTALL WAX SEAL

Invert toilet on floor (cushion to prevent damage), and install wax ring evenly around waste flange (horn), with tapered end of ring facing toilet. Apply a thin bead of sealant around toilet base.


3

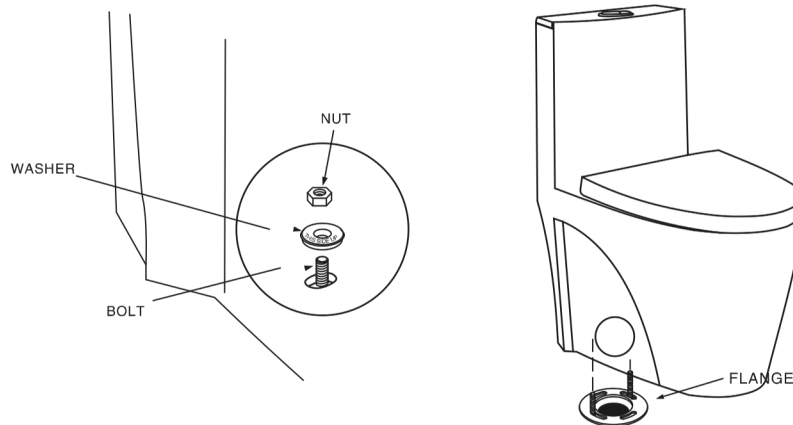

POSITION TOILET ON FLANGE

- Unplug floor waste opening and install toilet on closet flange so bolts project through mounting holes.
- Loosely install retainer washers and nuts.

4

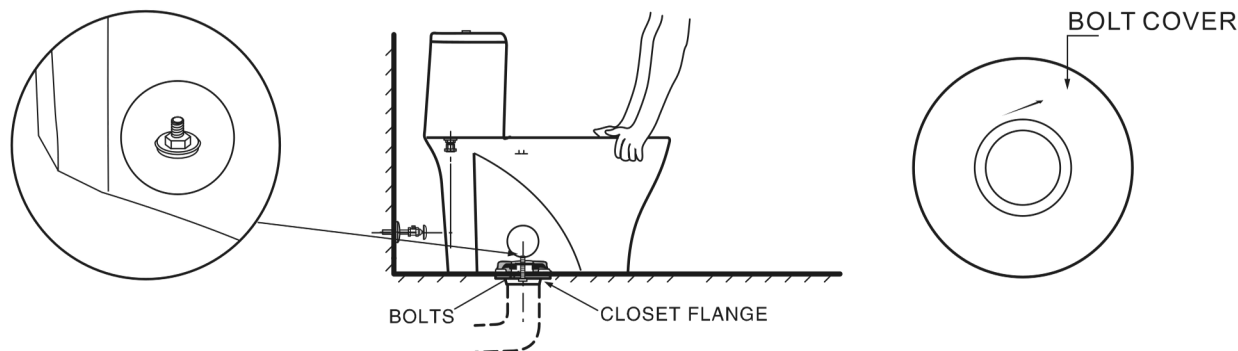

INSTALL TOILET

- Position toilet squarely to wall and, with a rocking motion, press bowl down fully on wax ring and flange. Alternately tighten nuts until toilet is firmly seated on floor.

⚠ CAUTION: DO NOT OVERTIGHTEN NUTS OR BASE MAY BE DAMAGED!

- Adhere bolt covers to toilet.
- Smooth off the bead of sealant around base. Remove excess sealant.