

MIA




MIA CETIO – ONE-PIECE SKIRTED TOILET

TECHNICAL INFORMATION


VERIFY VALVE AND ROUGH-IN POSITION BEFORE INSTALLATION.

TOILET TYPEONE-PIECE TOILET
DESIGNFULLY SKIRTED CONCEALED TRAPWAY
BOWL SHAPEROUND MODERN BOWL
INSTALLATION TYPEFLOOR MOUNTED
WASTE OUTLETFLOOR OUTLET
FLUSH SYSTEMSINGLE SIDE FLUSH
FLUSH TECHNOLOGYSIPHONIC FLUSHING SYSTEM
WATER CONSUMPTION0.8 GPF (4.8 / 3 LPF)
TRAPWAYFULLY GLAZED TRAPWAY FOR IMPROVED FLOW
SEATSLOW-CLOSE SEAT WITH EASY-RELEASE SYSTEM
ROUGH-IN12" | 305 MM
CERTIFICATIONCUPC CERTIFIED
OUTLET TYPEVERTICAL OUTLET

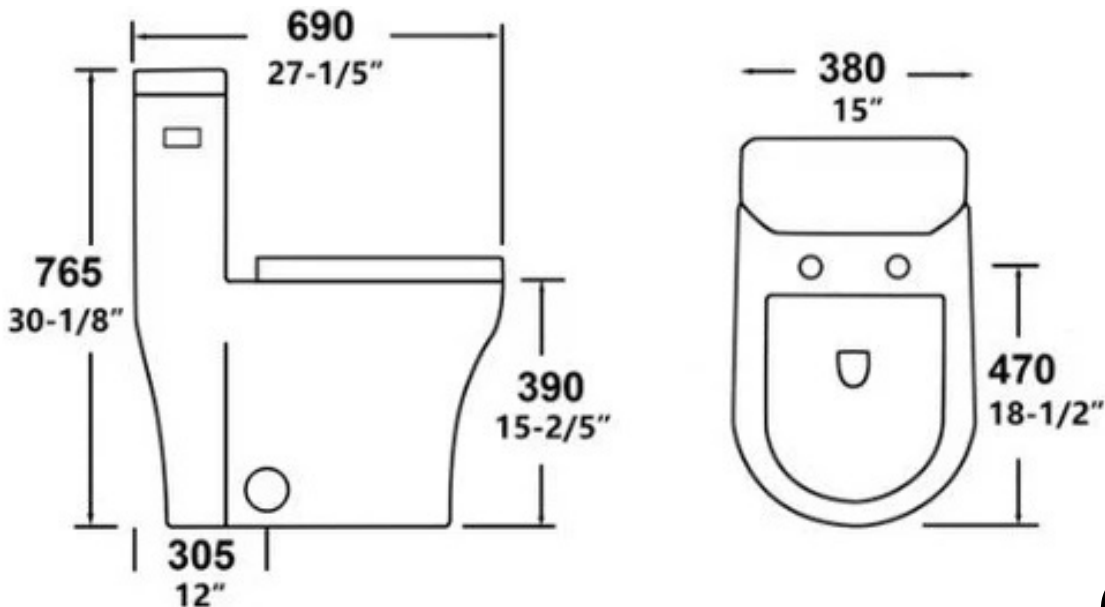

CETIO


1

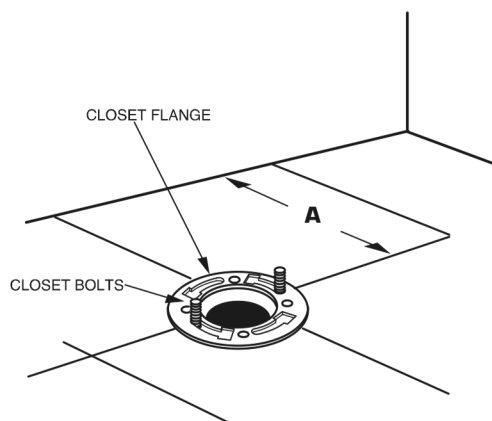

INSTALL CLOSET BOLTS

Install closet bolts in flange channel, turn 90°, and slide into place 6" (152 mm) apart and parallel to wall.


2

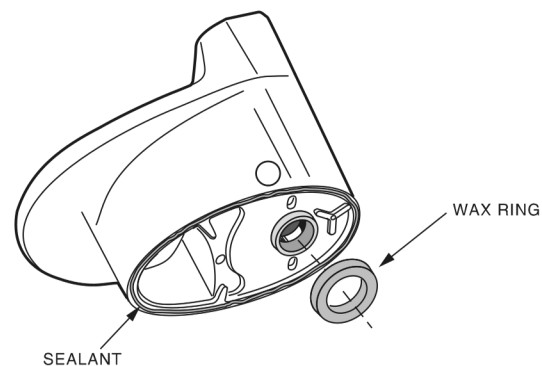

INSTALL WAX SEAL

Invert toilet on floor (cushion to prevent damage), and install wax ring evenly around waste flange (horn), with tapered end of ring facing toilet. Apply a thin bead of sealant around toilet base.


3

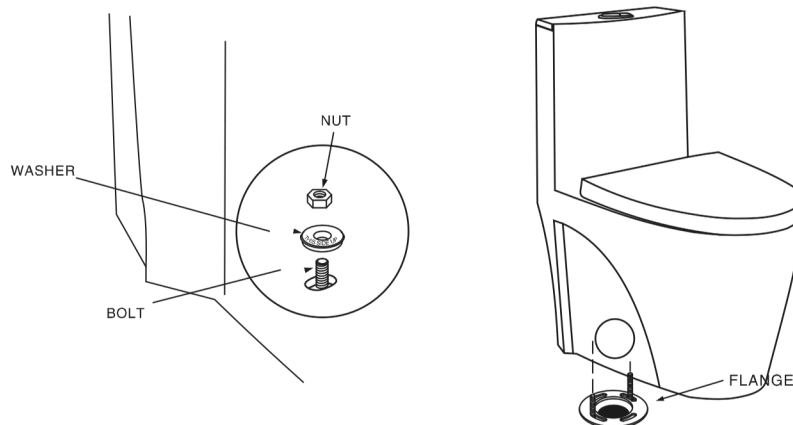

POSITION TOILET ON FLANGE

- Unplug floor waste opening and install toilet on closet flange so bolts project through mounting holes.
- Loosely install retainer washers and nuts.

4

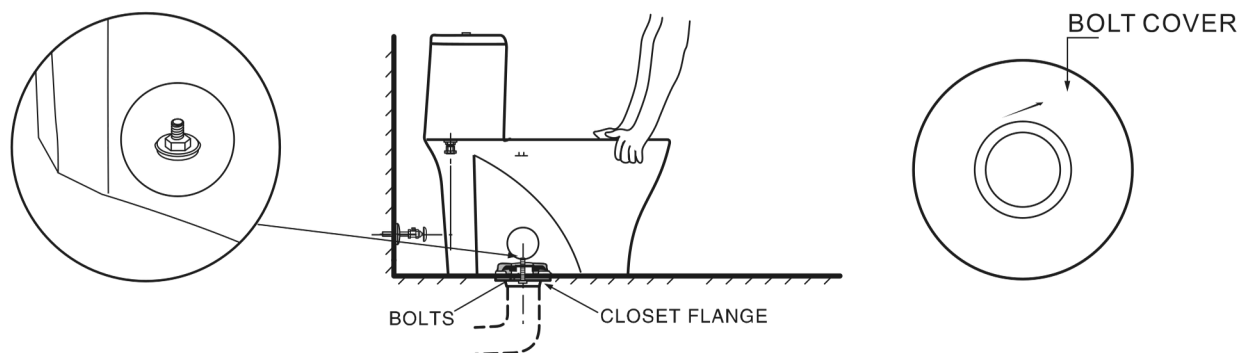

INSTALL TOILET

- Position toilet squarely to wall and, with a rocking motion, press bowl down fully on wax ring and flange. Alternately tighten nuts until toilet is firmly seated on floor.

⚠ CAUTION: DO NOT OVERTIGHTEN NUTS OR BASE MAY BE DAMAGED!

- Adhere bolt covers to toilet.
- Smooth off the bead of sealant around base. Remove excess sealant.